

Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879
USA Tech Support 800-507-2338 ext. 114



E40-82-096-01-01

Vehicle 22+ Toyota Tundra


Notes

Kit Contents	Description	Part Number	Quantity
	Rear Sway Bar	AS41-82-096-01-RA	1
	Sway Bar Bushing	ES5026.01	2
	Sway Bar Bracket	UB0521	2
	Lubricant	AR.Lubricant	1

**Installation
Notes**

Read all instructions before beginning installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and Piston rod nuts.
- All Eibach springs should be installed with the Eibach logo right-side-up.
- After Installation, inspect and adjust the following: Wheel Alignment; tire/wheel fender clearance when using aftermarket wheels or tires; brake line clearance and attachments; anti-lock-brake system sensors.

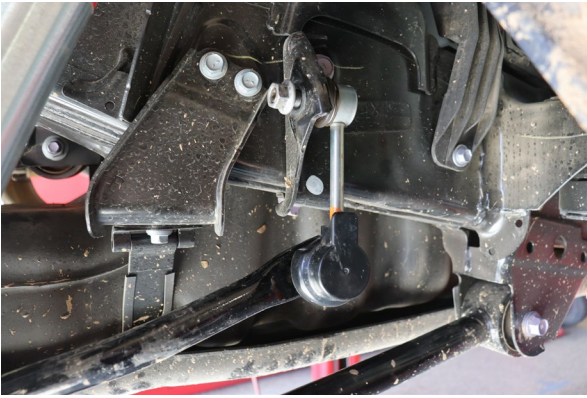


Loosen and disconnect the end links from the sway bar.



Loosen and remove the OE sway bar brackets.



Remove the OE rear sway bar.

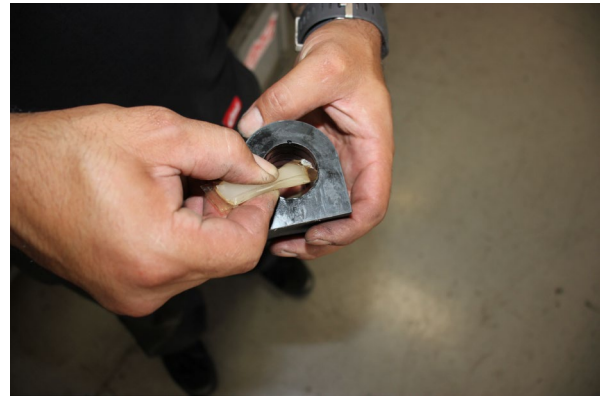


Liberaly apply the provided lubricant to each sway bar bushing and install the bushings onto the bar.



Install the provided sway bar brackets with the OE hardware.



Reinstall the end links to the desired hole on the sway bar.

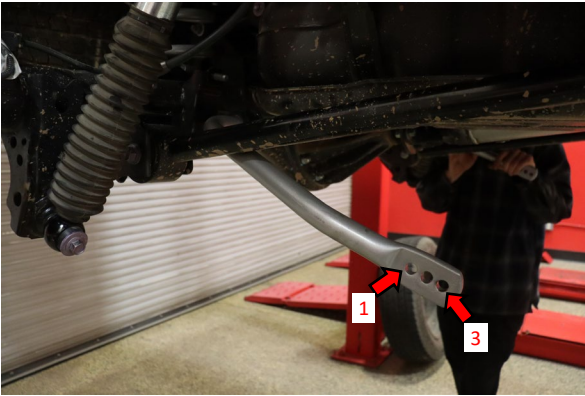

1: Firmest setting

- Least amount of body roll
- less suspension articulation
- Best for towing

3: Softest setting

- More body roll
- Most suspension articulation
- Best for offroad

Once complete, test drive the vehicle and then recheck the bolts and end links to make sure everything is tight.